


# Remote Control and TV


The remote control shape, location, availability and function of remote control buttons may vary depending on your region/country/TV model.

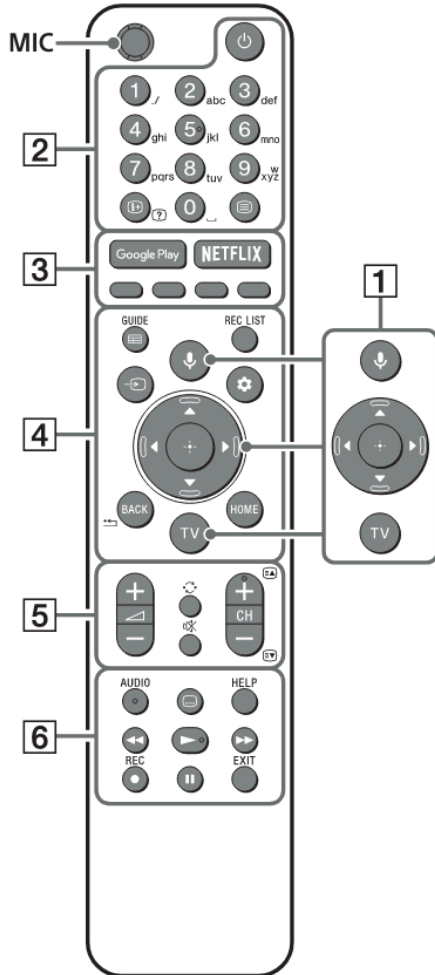

- 1** **(Microphone):** Use the Google Assistant\*<sup>1,2</sup> or voice search\*<sup>2</sup>. For hints on how to control your TV press (Microphone) button and speak the phrase "voice hints".\*<sup>1</sup>  
: On screen menu navigation and selection.  
**TV:** Display TV channel list or switch to input.

- 2** **(Power)**  
**Number buttons**  
**(Info/Text reveal):** Display information.  
**(Text):** Display text information.

- 3** **Google Play / NETFLIX\*<sup>1</sup> / Colour buttons**
- 4** **GUIDE**/: Display the digital programme guide of TV or TV box\*<sup>1,3</sup>.  
**REC LIST:** Display the Rec list of USB HDD/DVR\*<sup>3</sup>.  
**(Input select):** Display and select the input source, etc.  
**(Quick settings):** Display Quick Settings.  
**BACK**/  
**HOME**
- 5** **+/- (Volume)**  
**(Jump)**  
**(Mute)\*<sup>4</sup>**  
**CH +/-**//: Select the channel, or next () / previous () page.
- 6** **AUDIO:** Select the sound of multilingual source or dual sound (depend on programme source).  
**(Subtitle setting)**  
**HELP:** Display the Help menu.  
**REC:** Record the currently viewed programme on USB HDD/DVR\*<sup>3</sup>.  
**EXIT**

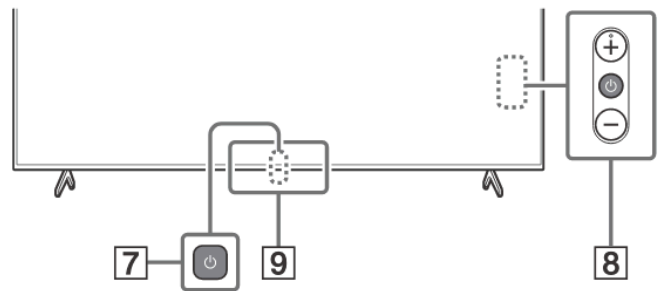

- 7** **(Power) (except KD-49XH81xx / 49XH80xx / 43XH81xx / 43XH80xx)**
- 8** **(Power)/+/- (KD-49XH81xx / 49XH80xx / 43XH81xx / 43XH80xx only)**
- 9** **Remote Control sensor / Light sensor / LED**

\*1 Only on limited region/country/TV model/language.  
 \*2 The Google Assistant or voice search requires an Internet connection.  
 \*3 [TV box setup] setting is required.